

# Proxmark3 RDV4 BLE/Battery Addon "BlueShark" Hardware Install Guide




Step 1: Remove antenna case


Step 2: Remove top case via spudger wedge tool



Step 3: Remove 6 screws holding antenna

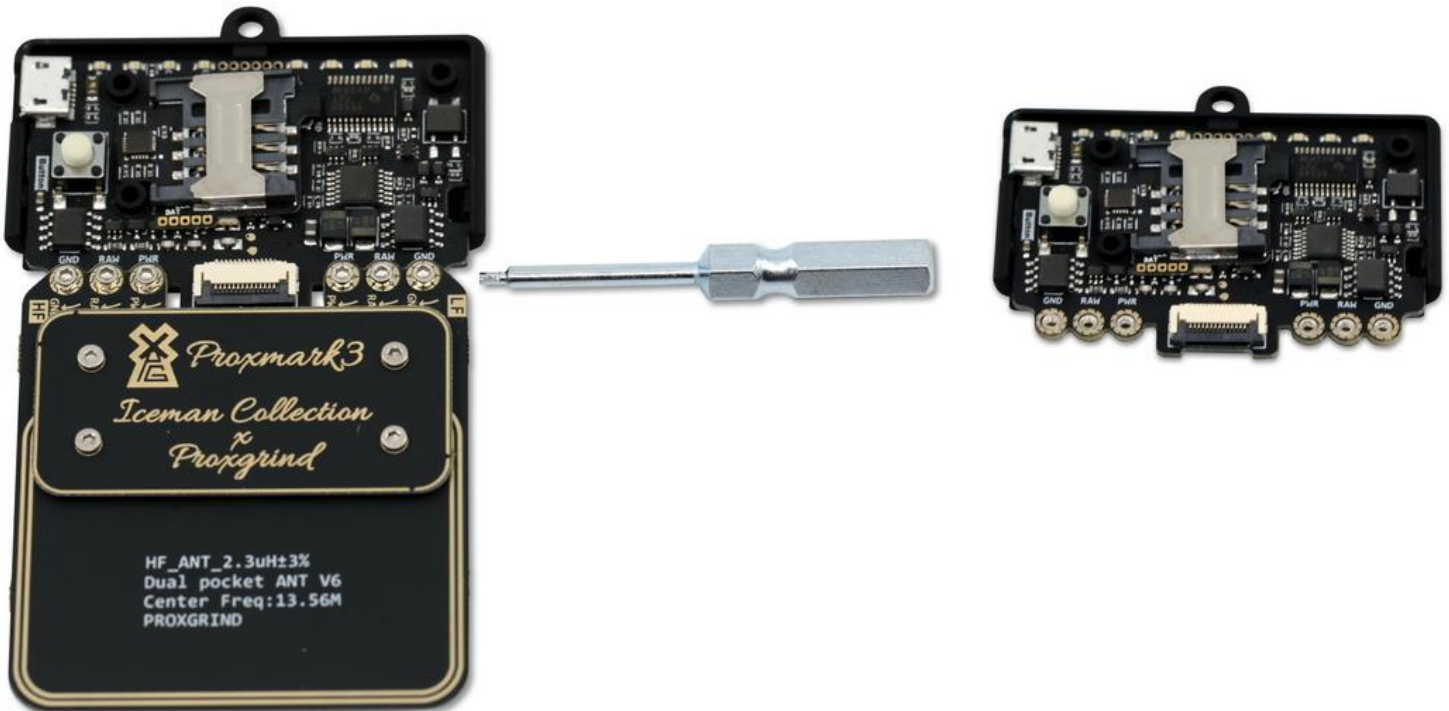

Step 4: Lift connector and align ribbon cable

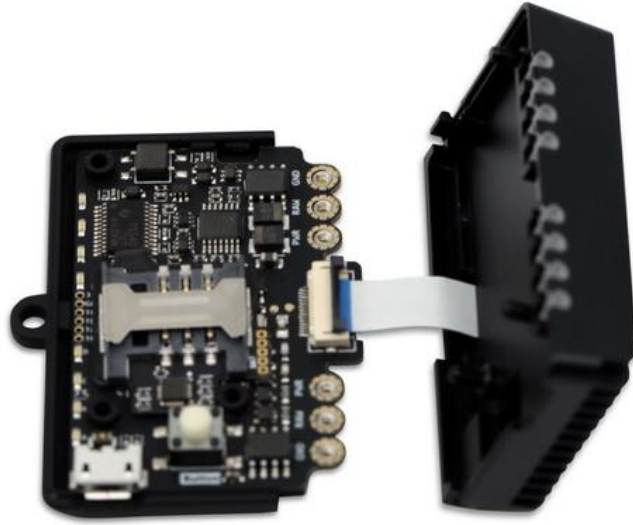

Step 5: Close connector



Step 6: Align the mounting holes and snap the addon into the pm3 rdv4 unit



Step 7: Install antenna again via 6 screws

